

How to Migrate to VSS Instruction Manual

For NR-v2 Series NVR



Revision Number: v1.0 Software Version: v1.0



Contents

Introduction	3
Important Notice	3
Prerequisites	4
Instructions	5
Supported Models	5
Software Upgrade	5
License Activation	6
Important Notice	6





Introduction

This document describes the necessary steps to help you migrate your system from VAST 2 NR-v2 Series NVRs to VAST Security Station (VSS) Professional. Please read the instructions carefully before starting the system migration.

Important Notice

- The product edition of VAST 2 NR-v2 Series NVRs will become VSS Professional directly after the migration and cannot be changed to VSS Standard.
- For NS9521 and NS9521-AI users, please put the migration on hold until VSS v1.1. release (2023 Q3).
- The migration of VAST 1 NR Series NVRs is not supported and will not be covered in this document.





Prerequisites

Please make sure that you complete the planning steps and meet the prerequisites before the system migration.

- 1. Back up current VAST 2 configuration and export license REQ files.
 - 1.1 How to back up configuration of VAST 2 (Instructions)
 - 1.2 How to back up licenses REQ files of VAST 2 (Instructions)
- 2. Download VAST 2 v2.13 installation file (<u>Download</u>) and upgrade to VAST 2 v2.13.
 - 3.1 The original complimentary licenses will need to be activated using the new activation process when upgrading from v2.12 or earlier versions to v2.13 (<u>Instructions</u>). Purchased camera licenses that have been already activated in v2.12 or previous version do not need to re-activate them using the new activation process.
 - 3.2 The camera list, recordings, and most of the settings will be kept after upgrading from VAST 2 to VSS. However, your VAST 2 camera licenses will become invalid and need to activate VSS camera licenses due to the change of license mechanism.
- 3. Back up VAST 2 v2.13 configuration and export license REQ files.
- 4. Download VSS v1.0 installation file (<u>Download</u>) and follow the software upgrade and license activation instructions based on your system deployment.





Instructions

Supported Models

- NR9581-v2
- NR9681-v2
- NR9682-v2
- NR9782-v2

Software Upgrade

Follow the below instructions to upgrade VAST 2 v2.13 NR-v2 series NVRs to VSS Pro edition. Step 1: Run VSS setup.exe

1.1 Select a language



1.2 Read and agree to the notice for VAST 2 v2.13 users. Check the box and click Next > to continue

ATTENTION
For VAST2 users: - Please note that your current VAST2 license will be invalid. You need to activate VAST Security Station (VSS) license after the installation process.
□ I have read and agree to this notice.

1.3 Select the programs you want to install and click Next > to continue





VAST Security Station	<u> </u>		×
Select the programs you want to install			
☑ Server (Upgrade) ☑ Client (Upgrade)			
Space required: 1079 MB			
< Back	Next >	Can	cel

1.4 Enter the user name and password and click Next > to continue

AST Security Station		
nter user name and pa	ssword	
Server user name:	admin	
Server password:	•••••	

1.5 The upgrade process is completed

Step 2: Back up

2.1 Back up VSS configuration and export REQ files every time you purchase and activate new licenses

License Activation

During the upgrade process, the original built-in VAST 2 Camera Licenses will be converted to VSS Pro Camera Licenses automatically.

Important Notice

Please note that this is a software upgrade so resetting to default will recover the image in SATA-DOM to the original VAST 2 version, including the converted licenses. However, you can upgrade to VSS anytime by re-doing the above upgrade process. If you have extra purchased VSS Pro



Embedded NVR-Camera Licenses, please follow the below instructions: Reach out to your distributor or regional VIVOTEK sales representative > Provide the exported REQ files > Ask for the corresponding license LIC file > Import the LIC files.

